
UPPER OVEN PARTS

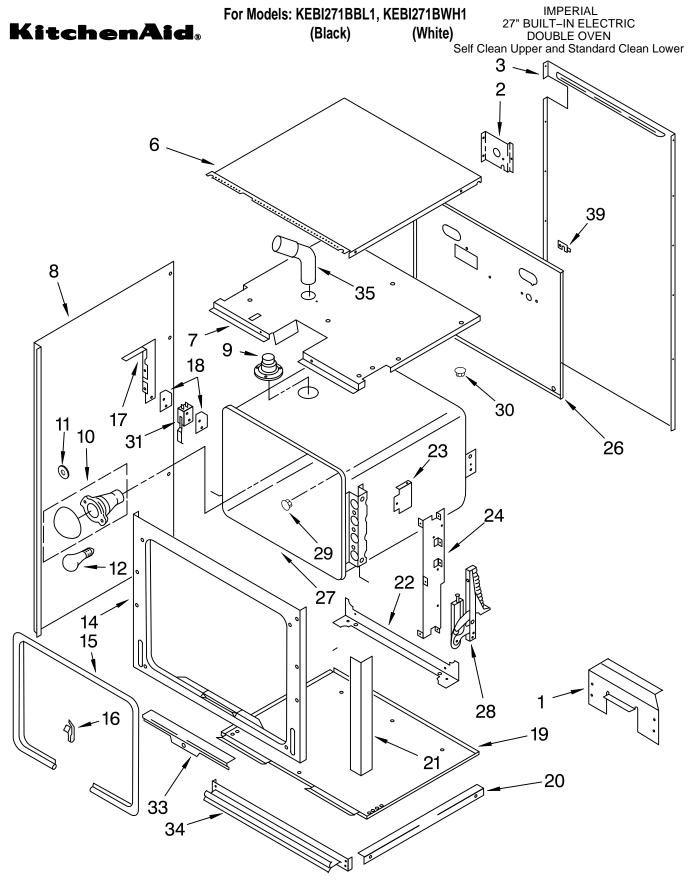

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UPPER OVEN PARTS

For Models: KEBI271BBL1, KEBI271BWH1 (Black) (White)

| Illus No. | . Part No. | DESCRIPTION | IIIus. No. | Part No. | DESCRIPTION | Illus. No. | Part No. | DESCRIPTION |
|----------------|-------------------------------|---|----------------------------|---|--|---------------|--|--|
| requ liste | ired to atta | ews and nuts ich a part are ely following | 16 17 18 19 20 | 3179848 3177681 3177923 3177621 3179220 | Bracket, Switch Insulator, Switch Bottom, Module | 31 33 | 4173553 4159117 313489 3179587 4168863 | Nut (2) Screw (2) Retainer, Seal |
| 1 | 3183752 | Bracket, Mounting Control Frame | 21 | 3185647 | Screw Side Trim, | 34 | 3187883 | Vent, Middle Trim Black Model |
| 2 3 | 3177545 3177623 3185647 | Bracket, Conduit Cabinet, Back Screw | | 3187875 3187878 | | | 3187885 3180022 3188645 | Screw (4) |
| 6 7 | 3178143 3185647 3183748 | Cabinet, Top Screw Top, Module | 22 23 | 3177434 3185647 3178612 | Support, Oven Screw | 35 39 | 3183791 4168203 4159445 | Vent, Tube Cover, Cap Tube |
| 8 | 3185647 3177440 | Screw Side, Cabinet | | 3179795 3185647 | Screw (6) Screw | | | VING PARTS |
| 9 | 3181699 3185648 | Tube, Vent Screw (3) | 24 | 3177433 3185647 | Screw | | NOT ILL | USTRATED |
| 10 11 | 3150505 3184533 | Oven Light Assy. Gasket, Light | 26 | 3177560 3185647 | Screw | INSU | ILATION | |
| 12 14 15 | 311255 3186950 3179813 | Bulb, Oven Light Frame, Front Seal, Door | 27 28 29 30 | 3185562 3178298 3185085 3182814 | Hinge, Door (2) Button, Plug | | 3185551 3177872 | Insulation, Wrap Insulation, Back |
| | | | | | | | | |

OPTIONAL PARTS (NOT INCLUDED)

| Illus. No. | Part No. | DESCRIPTION | Illus. No. | Part No. | DESCRIPTION | Illus. No. | Part No. | DESCRIPTION |
|---------------|-------------|-------------------------|-----------------|-------------|-----------------|-----------------|-------------|-------------|
| | FOL 1 61 | AUNO DA DEC | PAI | NT, TOL | JCH-UP (1/2oz.) | PAI | NT, BUL | _K (1 qt.) |
| | | WING PARTS LUSTRATED | | | <u> </u> | | 79934 | 4 White |

SPLICING WIRES--25FT.

LENGTH

| | 18 Ga. 80°c Rating |
|--------|---------------------|
| 350806 | Yellow |
| | 16 Ga. 80°c Rating |
| 242829 | Blue |
| | 14 Ga. 150°c Rating |
| 242820 | Black |
| 242821 | Blue |
| 242822 | Brown |
| 242823 | Green |
| 242824 | Orange |
| 242825 | Red |
| 242826 | White |
| 242827 | Yellow |
| | 14 Ga. 200°c Rating |
| 242830 | Brown |
| 242831 | Red |
| 242832 | Yellow |
| | 12 Ga. 150°c Rating |
| 242828 | Black |
| 242829 | Red |

| . = | |
|--------|---------------|
| 72107 | Almond |
| 72110 | Harvest Gold |
| 72112 | Toast |
| 72113 | Platinum |
| 72032 | Black |
| 261869 | Citrine White |
| | |

72017 White

PAINT, PRESSURIZED SPRAY

(13 oz.)

| 350930 | White |
|--------|------------------|
| 350956 | Almond |
| 261890 | Harvest Gold |
| 285365 | Toast |
| 285366 | Platinum |
| 830864 | Black |
| 350942 | Primer |
| 350941 | Leveler (Primer) |
| | |

| 799344 | White |
|--------|--------------|
| 978883 | Almond |
| 261891 | Harvest Gold |
| 285367 | Toast |
| 285368 | Platinum |

ADHESIVE

| 482338 | Sealer, Silastic |
|--------|-------------------|
| | (3 Oz.) |
| 591014 | Adhesive, Loctite |
| | (1/3 Oz.) |

ACCESSORY PARTS


| 799832 | Kit, Porcelain |
|--------|----------------|
| | Repair (White) |
| 832985 | Rack, Cooking |
| | (Bi-Level) |

Miscellaneous

3171507 Mounting Hardware

4174405


LOWER OVEN PARTS

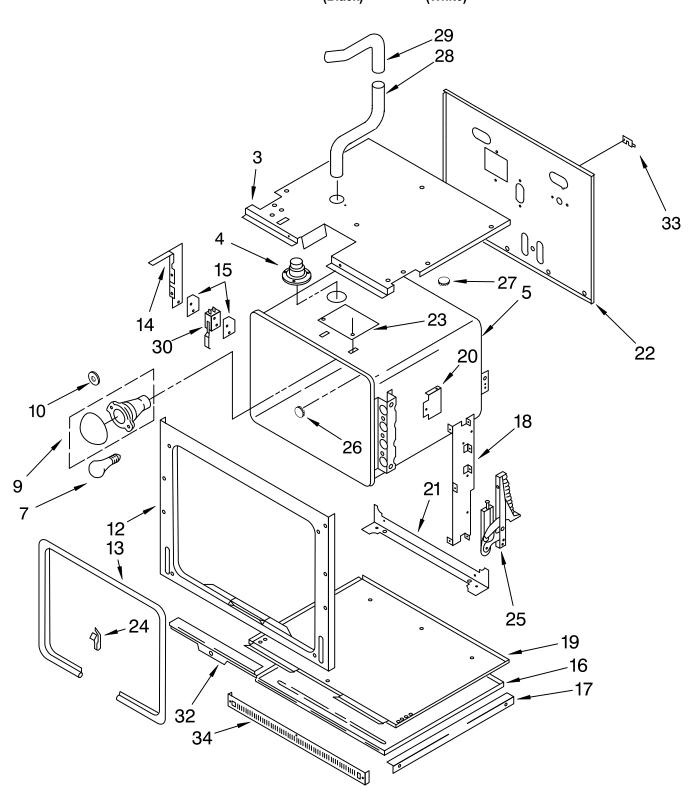

LOWER OVEN PARTS


| Illus. Part No. No. DESCRIPTION | Illus. Part No. No. DESCRIPT | Illus. Part No. No. DESCRIPTION |
|---|---|---|
| NOTE: The screws and nuts required to attach a part are listed immediately following that part. 3 3183748 Top, Module 3185647 Screw 4 3181700 Tube, Vent | 17 3179220 Rail, Suppor 3185647 Screw 18 3177433 Bracket, Hin 3179795 Screw (6) 3185647 Screw 19 3177621 Bottom, Mod 20 3178612 Shield, Radia 3179795 Screw (6) 3185647 Screw | ge (2) 4159117 Nut (2) 313489 Screw (2) 32 3179587 Retainer, Seal 4168863 Screw (2) lule 33 4168203 Cover, Cap Tube |
| 3185648 Screw (3) 5 3185562 Liner, Oven 7 311255 Bulb, Oven Light 9 3150505 Oven Light Assy. 10 3184533 Gasket, Light 12 3177688 Frame, Front 13 3179813 Seal, Door 14 3177681 Bracket, Switch 3177991 Screw (2) 15 3177923 Insulator, Switch 16 3177551 Bottom, Oven | 21 3177434 Support, Over 3185647 Screw 22 3177560 Back, Modul 3185647 Screw 23 3180126 Cover, Latch 24 3179848 Clip, Seal (3 25 3178298 Hinge, Door 26 3185085 Button, Plug 27 3182814 Button, Plug 28 3182159 Tube, Vent 3185647 Screw 29 3182160 Tube, Vent | en 3187957 White Model FOLLOWING PARTS NOT ILLUSTRATED (2) |

CONTROL PANEL PARTS

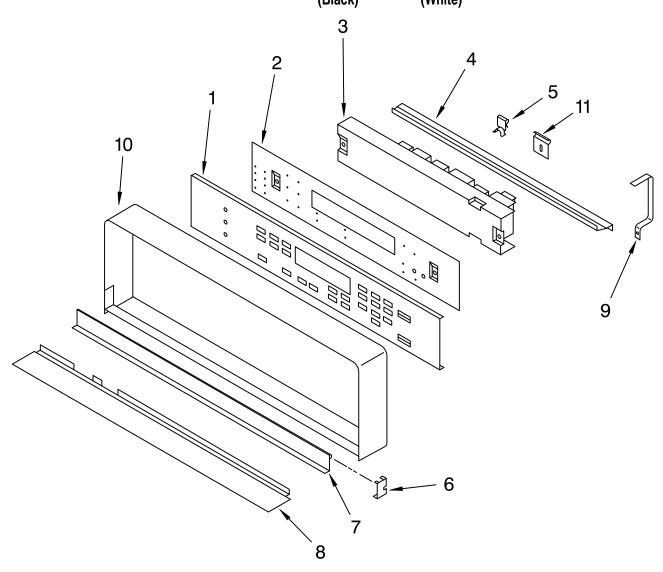

| Illus. No. | Part No. | DESCRIPTION | Illus. No. | Part No. | DESCRIPTION | Illus. No. | Part No. | DESCRIPTION |
|---------------|--------------|---|-----------------------------|--|---|---------------|----------------------------------|--|
| requ liste | ired to atta | ews and nuts ich a part are ely following Membrane, Switch Black White Bracket, Mounting Switch Membrane Microcomputer Retainer, Bracket Screw | 5 6 7 8 9 10 | 3182985 3182162 3182151 3182154 3183702 3184321 3182939 3187954 3187955 3184567 | Clip, Retainer Trim, Door Door, Latch Handle Black White Trim, Panel Bracket Screw Frame, Control Panel Black Model White Model Clip, Control Frame | LI | T3186938 T3183659 T3188198 | Tech Sheet Installation Instructions Use & Care Guide |

UPPER OVEN DOOR PARTS

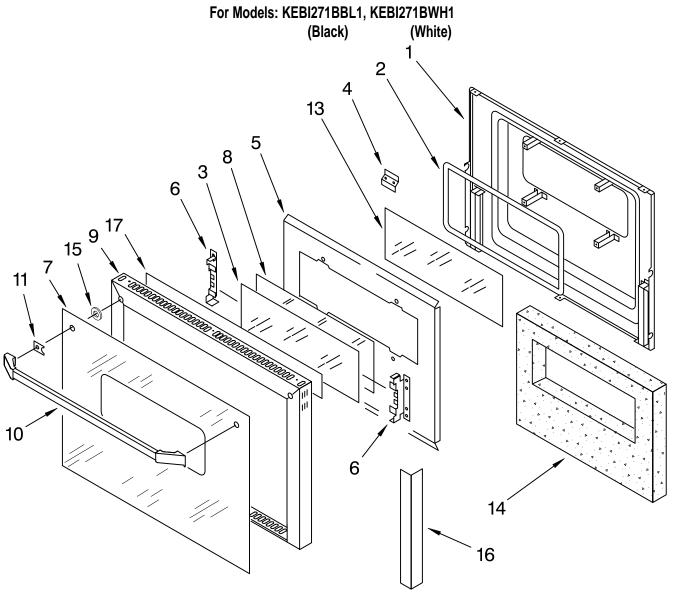

| Illus. No. | Part No. | DESCRIPTION | Illus. | Part No. | DESCRIPTION | Illus. No. | Part No. | DESCRIPTION |
|---|-------------|------------------|--------|-------------|----------------------------|---------------|--------------------|---------------------------|
| NOTE: The screws and nuts required to attach a part are | | | 5 | 3188815 | Insulation Retainer | 10 | 3185986 | Handle, Door Black |
| | | ely following | | 4168863 | Screw | | 3185987 | White |
| that | part. | | 6 | 3185439 | Bracket, Glass Mounting | 11 | 3181637 3182138 | Screw (2) Spacer, Door |
| | | | | 3185647 | Screw | '' | 3102130 | Handle(2) |
| 1 | 3185497 | Liner, Door | 7 | 0100011 | Glass, Door | 13 | 3185457 | Glass, Clear |
| _ | 3178001 | Screw, Black (2) | | 3187863 | Black | 14 | 3185460 | Insulation, Door |
| 2 | 3185462 | Gasket, Window | | 3187865 | White | 15 | 3188599 | Bushing (2) |
| 3 | 3185459 | Glass, Clear | 8 | 3185458 | Glass, Reflective | 16 | 3188635 | Foil, Adhesive |
| 4 | 3185438 | Latch, Strike | 9 | | Frame, Door | 17 | 3188633 | Foil, Adhesive |
| | 3185647 | Screw | | 3187850 | Black Model | | | |
| | | | | 3187852 | White Model | | | |
| | | | | | | | | |
| | | | I | | | | | |

LOWER OVEN DOOR PARTS

For Models: KEBI271BBL1, KEBI271BWH1 (Black) (White) 1 13 5 11/1 15 11 10 Illus. Part **DESCRIPTION** No. No. NOTE: The screws and nuts required to attach a part are listed immediately following that part. 3185498 Liner, Door Screw, Black (2) 3178001 Gasket, Window 3185462 3188815 Insulation, Retainer 4168863 Screw Glass, Door 3187863 Black White 3187865 Frame, Door 3187850 Black Model 3187852 White Model 10 Handle, Door 3185986 Black White 3185987 Screw (2)

3181637

3182138 3185457

15 3188599

11


13

Spacer, Handle

Bushing, Handle


Glass, Clear

LATCH AND VENT PARTS

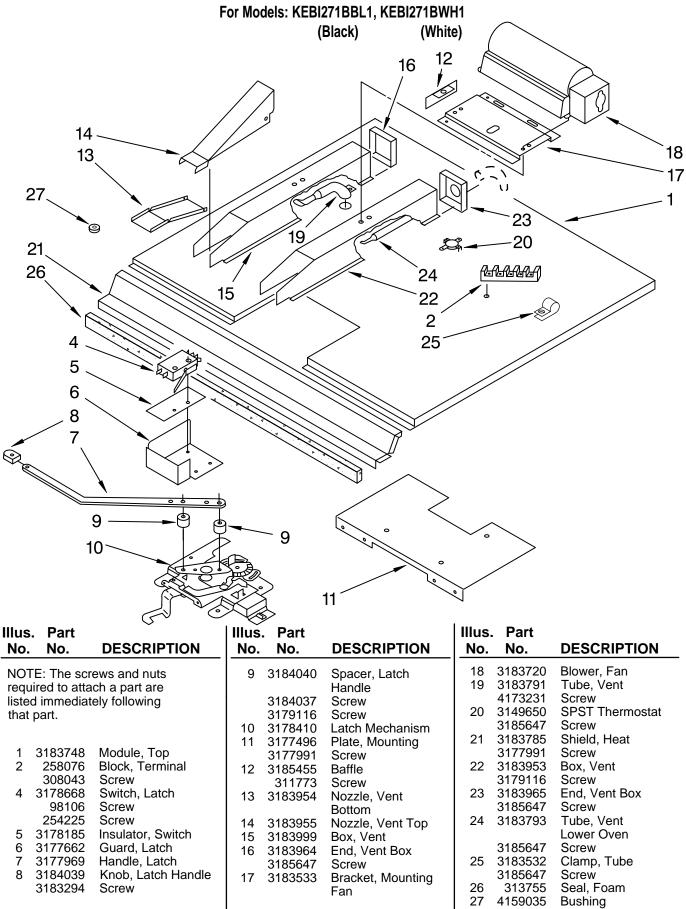

OVEN LINER PARTS

For Models: KEBI271BBL1, KEBI271BWH1 (Black) (White)

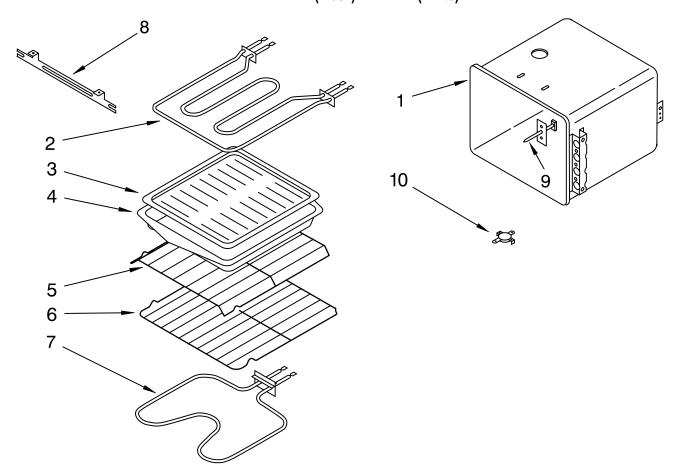


Illus. Part
No. No. DESCRIPTION


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

| 1 | 3185562 | Liner, Oven |
|----|---------|------------------|
| 2 | 661415 | Element, Broil |
| 3 | 3147563 | Grill, Broiler |
| 4 | 3147845 | Pan, Broiler |
| 5 | 3185307 | Rack, Offset |
| 6 | 3185368 | Rack, Oven |
| 7 | 661416 | Element, Bake |
| 8 | 3180694 | Bracket, Element |
| 9 | 3148440 | Sensor, Heat |
| | 3185648 | Screw |
| 10 | 3149653 | SPST-Thermostat |

4174405 9

WIRING HARNESS PARTS

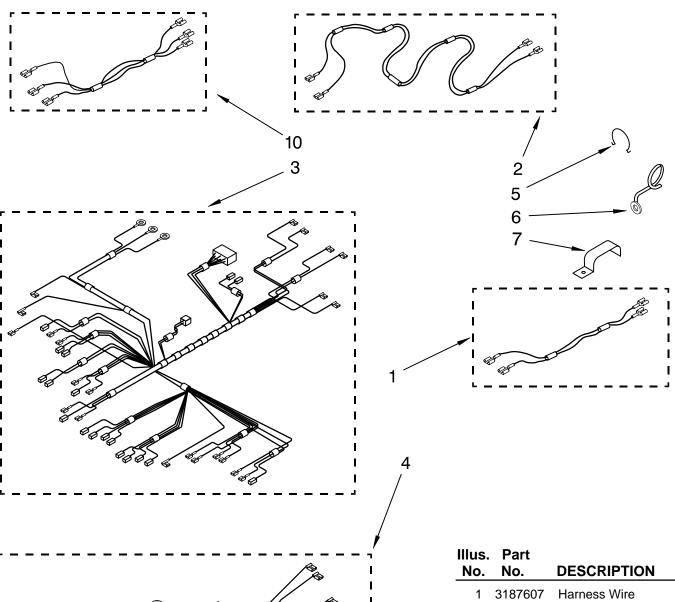

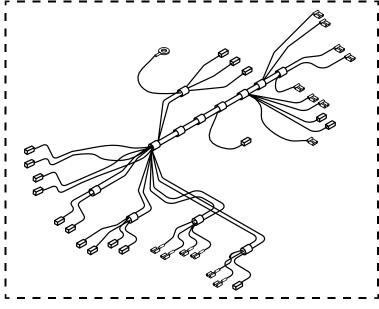

| Illus. No. | Part No. | DESCRIPTION |
|---------------|--------------------|---|
| 1 | 3187607 | Harness Wire (Door Switch) |
| 2 | 3183656 | Upper) Harness Wire (Door Switch Lower) |
| 3 | 3186939 | Harness Wire (Lower Oven) |
| 4 | 3185966 | Harness Wire (Upper Oven) |
| 5 | 313438 | Clip |
| 6 | 3179668 3185647 | Standoff, Wire Screw (4) |
| 7 | 4159037 | Clamp, Wire |
| 10 | 3185952 | Harness, Wire Latch Assy. |